

# LED T8U REPLACEMENT LAMP

### **INSTALLATION GUIDE**

Items: L4T8E/U6/835/13F-70, L4T8E/U6/840/13F-70 and L4T8E/U6/850/13F-70

#### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

#### DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION

**CAUTION** – If the lamp or luminaire exhibits undesirable operation (buzzing, flickering, etc.), immediately turn off power, remove lamp from luminaire and contact manufacturer.

 
**CAUTION** – RISK OF FIRE – Do not install this lamp in a pre-heat luminaire.

WARNING - RISK OF FIRE. Use only in place of fluorescent lamps specified on label.

This lamp only operates on electronic ballasts. If lamp does not light when the luminaire is energized, remove lamp from luminaire and contact lamp manufacturer or qualified electrician.

These devices are not intended for use with emergency exit fixtures or emergency exit lights.

## INSTRUCTIONS



Step 1 Step 2-3



 
·3 S1



Step 4



Step 5-6



Step 7

- 1) Turn off the power to the luminaire.
- 2) Remove diffuser (if provided).
- 3) Remove the existing fluorescent lamps from the luminaire. & dispose of, in accordance with government regulations in your area.
- 4) Install LED T8 U-Bend lamps, while ensuring pins are firmly seated in the lampholders.
- 5) Ensure lamp is secured by clip.
- 6) Replace diffuser (if removed in step 2).
- 7) Switch on power to the luminaire.

#### **IMPORTANT SAFETY INFORMATION:**

CAUTION: IF THE LAMP OR LUMINAIRE EXIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT THE MANUFACTURER.

