



Southwire®

41160S

VOLTAGE/CONTINUITY TESTER

Simple to use tester automatically selects continuity or AC and DC voltage up to 600 volts in 7 steps.



QUICK CONTINUITY READING
Check continuity of wires, light bulbs and fuses

AUTOMATIC SELECTION
AC, DC, or Continuity

BATTERY SAVER
Automatically turns on and off

EASY TO READ DISPLAY
Indicates polarity and seven levels of AC/DC voltage

3 FUNCTIONS

AC Voltage
DC Voltage
Continuity



Southwire™

TOOLS & EQUIPMENT

[BUILT FOR DURABILITY.
BUILT FOR RELIABILITY.
BUILT FOR WORK.]

1-855-SWTTOOLS
(855-798-6657)



Southwiretools.com

©2015 Southwire Company, LLC. All rights reserved. Trademark of Southwire Company, LLC.



Southwire®

41160S

VOLTAGE/CONTINUITY TESTER

Features

- Visual and audible continuity test
- Automatic selection: AC, DC, or continuity
- Automatically turns on and off
- Indicates polarity and seven levels of AC/DC voltage
- CAT III 600V, UL Listed

Includes

- 41160S Tester with integrated test leads
- Two AA batteries

Specifications

AC VOLTAGE INDICATION:	24, 120, 208, 240, 277, 480, 600V
DC VOLTAGE INDICATION:	6, 12, 24, 36, 48, 110, 220
ACCURACY:	-30% to 0% if indication
CONTINUITY	
RESISTANCE RANGE	<85kΩ

GENERAL SPECIFICATIONS	
Safety Rating	CAT III 600V
Operating Temperature	32° to 122°F (0° to 50°C)
Storage Temperature	-22° to 140°F (-30° to 60°C)
Batteries	Two AA
Dimensions	7.3 x 3 x 1.6 in. (185 x 76 x 41mm)
Weight	0.65 lb (295g)



Southwire™

TOOLS & EQUIPMENT

[BUILT FOR DURABILITY.
BUILT FOR RELIABILITY.
BUILT FOR WORK.]

1-855-SWT00LS
(855-798-6657)



Southwiretools.com

©2015 Southwire Company, LLC. All rights reserved. Trademark of Southwire Company, LLC.