

Item:
 LPLTA-9W-CTSW-H
 LPLTA-9W-CTSW-V
 LPLTA-9W-CTSC-H
 LPLTA-9W-CTSC-V



TYPE A CCT SELECT PL LAMP INSTALLATION INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS!



WARNING

- Make all electrical and ground connections in accordance with local codes or the National Electrical Code. If you are not familiar with these codes and requirements, consult a qualified electrician. This Professional should be familiar with the construction and operation of this product and hazards involved. Failure to do so may result in serious personal injury.
- To reduce the risk of fire, electric shock, personal injury, or property damage, please read and follow all safety instructions. If you do not understand these instructions or if any additional information is required, contact your local Topaz representative. Retain these instructions for maintenance reference.
- Do not exceed the allowed supply voltage marked on the luminaire label information.
- Disconnect power at the circuit breaker panel before any installation.
- Do not install this lamp in a preheat luminaire.



CAUTION

- Do not expose wire to any sharp objects such as sheet metal to prevent wiring damage or abrasion.
- While the light is on, please avoid direct eye exposure.
- Combustible material should be kept away from fixture/LENS.
- Do not make or alter any open holes in any enclosure or any electrical component during installation.
- Do not use when the enclosure is damaged or broken in any way.
- Do not alter, relocate or remove wiring, lamp holder power supply or any other electrical component.
- This device is not intended to be used with any emergency lighting fixture.


Model	Ballast Input Voltage	Frequency	Power	Rated Current
LPLTA-9W-CTSW-H	120-277V	50-60Hz	9W	0.08A
LPLTA-9W-CTSW-V	120-277V	50-60Hz	9W	0.08A
LPLTA-9W-CTSC-H	120-277V	50-60Hz	9W	0.08A
LPLTA-9W-CTSC-V	120-277V	50-60Hz	9W	0.08A

Item:
LPLTA-9W-CTSW-H
LPLTA-9W-CTSW-V
LPLTA-9W-CTSC-H
LPLTA-9W-CTSC-V



TYPE A CCT SELECT PL LAMP INSTALLATION INSTRUCTIONS

Installation Instructions for
replacement of 13W/18W/26W
G24q PL and CFL lamps:

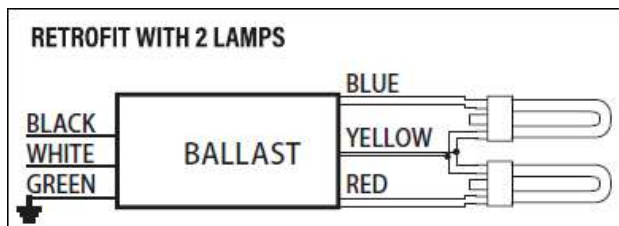

Ballast Compatible Instructions for G24q

1. Turn off power before beginning any electrical work.
2. Check all the items of the retrofit kit. Use the slide switch on the lamp to set different color temperatures(if available).
3. Check if the LED lamp ratings are compatible with the intended luminaire.
4. Remove the diffuser, lens cover or louver (if provided) and the existing fluorescent lamp(s) from the fixture.
5. Check if the ballast installed in the fixture is listed in the ballast compatibility chart. If not, do not assemble this retrofit kit. Ballast compatibility chart can be found on website by looking up the item number.
6. Install your new LED lamps. If using horizontal lamps rotate to desired position.
7. Replace the diffuser, lens cover or louver (if provided). Turn power on at the breaker box and turn on the lights.

****NOTE: THESE INSTRUCTIONS DO NOT ADDRESS ALL PERMUTATIONS THAT MAY EXIST IN INSTALLATION, MAINTENANCE, AND OPERATING ENVIRONMENT.**

✓	Compatible
✗	Not Compatible
-	N/A

Ballast Compatibility for LPLTA-9W-CTSx-x

Ballast Brand	Ballast Model	1 Lamp Load		2 Lamp Load	
		120V	277V	120V	277V
Keystone	KTEB-126-1-TP	✗	-	-	-
	KTEB-126-1-TP-SC/HB	✗	-	-	-
	KTEB-218-UV-RS-DW	✓	✓	✓	✓
	KTEB-226-UV-RS-DW	✗	✗	✗	✗
	KTEB-242-UV-RS-DW	✗	✗	✗	✗
	KTEB-218-UV-PS-DW	✓	✓	✓	✓
	KTEB-226-UV-PS-DW	✗	✗	✓	✓
	KTEB-242-UV-PS-DW	✓	✓	✓	✓
Advance	ICF-2S13-H1-LD	✓	✓	✓	✓
	ICF-2S18-H1-LD	✓	✗	✓	✓
	ICF-2S26-H1-LD	✓	✓	✓	✓
	ICF-2S13-M1-BS	✓	✗	✓	✓
	ICF-2S18-M1-BS	✓	✗	✓	✓
	ICF-2S42-M2-LD	-	-	✓	✗
	IZT-2T42-M5-LD	-	-	✗	✗
	REZ-2Q26-M2-BS	-	-	✗	-
	REZ-2Q26-M2-LD	-	-	✓	-
	REZ-2T42-M3-BS	✓	-	✓	-
	RMB-1P13-S1	✓	-	-	-
	VEZ-1T42-M2-LD	-	✓	-	-
VEZ-2Q26-M2-LD	-	-	-	✓	
Antron	CSD-UV18PS	✓	✓	✓	✓
Damar	20091D	✗	✗	✗	✗
Deltak	80208 DBC226MVRSN	✗	✗	✗	✗
	80204 DBC242MVRSN	-	✗	✓	✗
Easeic	FL 2x18/100-277V TCD PRO	-	-	✓	-
Fulham	WH2-120-C	-	-	✓	-
	WH33-120-C	✗	-	✓	-
	RHA-UNV-226-C	✓	✓	✓	✓
	RHA-UNV-242-C	✓	✓	✓	✓
	NPY-120-226-CFL	-	-	✗	-
Fusion	FB218CFLMV	✓	✓	✓	✓
	FB226CFLMV	✓	✓	✓	✓
	FB242CFLMV	✓	✓	✓	✓
GE	GEC218-MVPS-3W	✓	✓	✗	✓
	GEC226-MVPS-3W	✓	✓	✓	✓
	GEC242-MVPS-3W	✓	✓	✓	✓
Halco	EP2CF18PS/MV/DC/K	✓	✓	✓	✓
	EP2CF26PS/MV/DC/K	✓	✓	✓	✓
	EP2CF42PS/MV/DC/K	✓	✓	✓	✓
Howard	EP2/13CF/MV/K2	✓	✓	✓	✓
	EP2/18CF/MV/K2	✓	✓	✓	✓
	EP2/26CF/MV/K2	✓	✓	✓	✓
Lumapro	4KGJ7 EB-213PRS-U	✓	✓	✓	✓
	4KGJ8 EB-218PRS-U	✓	✗	✓	✓
	16X954 CSD-UV18PBX	✓	✓	✗	✗
	16x959 CSD-UV18P/BMKIT	✓	✓	✓	✓
Osram	QTP 1/2x13CF/UNV DM	✓	✓	✓	✓
	QTP 1/2x18CF/UNV DM	✓	✓	✓	✓
	QTP 2x26CF/UNV DM	✓	✓	✓	✓
	QTP 2x26CF/UNV DM PEM	✓	✓	✓	✓
	QTP 2x26CF/UNV QS	✗	✓	✗	✓
	QTP 2x26/32/42CF/UNV DM	-	-	✗	✗
	QTP 2x26/32/42CF/UNV DM PEM	-	-	✗	✗
Robertson	RED1L10-120	✓	-	-	-
	RSO126CQ120	✓	-	-	-
Standard	E1321-UV-S	✗	✗	✗	✗
	E2150-UV-S	✓	✓	✓	✓
	E21338-UV-TDE FLX	✓	✓	✓	✓
	E22142-UV-TDE FLX	✓	✓	✓	✓
	E22642-UV-A-TDE FLX	✓	✓	✓	✓
	ED2150-UV-BS	✓	✓	✓	✓
	ED22150-120-277-SL GLB	✓	✓	✓	✓
Tospo	TP 2/26 PS UV	✓	✓	✓	✓
Topaz	B2642UNV/ME-TPZ	-	-	✓	✓
Universal	C213UNVME	✓	✓	✓	✓
	C218UNVME	✓	✓	✓	✓
	C2642UNVME	✗	✗	✗	✗

****Note: Ballast compatibility list is subject to change without notice.**