Item:
PL14-40WPCTS-D   PL22-35WPCTS-D-EM
PL22-35WPCTS-D   PL24-40WPCTS-D-EM
PL24-40WPCTS-D   PL24-50WPCTS-D-EM
PL24-50WPCTS-D

TOPAZ®
A Southwire Company

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS!

⚠️ **WARNING**

- Make all electrical and ground connections in accordance with local codes or the National Electrical Code. If you are not familiar with these codes and requirements, consult a qualified electrician. This Professional should be familiar with the construction and operation of this product and hazards involved. Failure to do so may result in serious personal injury.
- To reduce the risk of fire, electric shock, personal injury, or property damage, please read and follow all safety instructions. If you do not understand these instructions or if any additional information is required, contact your local Topaz representative. Retain these instructions for maintenance reference.
- Do not exceed the allowed supply voltage marked on the luminaire label information.
- Disconnect power at the circuit breaker panel before any installation.

⚠️ **CAUTION**

- Do not expose wire to any sharp objects such as sheet metal to prevent wiring damage or abrasion.
- While the light is on, please avoid direct eye exposure.
- Combustible material should be kept away from fixture/LENS.
- Do not make or alter any open holes in any enclosure or any electrical component during installation.
- Do not use when the enclosure is damaged or broken in any way.
- Do not alter, relocate or remove wiring, lamp holder power supply or any other electrical component.
- Pursuant to NEC 410.69, "*Effective January 1, 2022, where control conductors are spliced, terminated, or connected in the same luminaire or enclosure as the branch-circuit conductors, the field-connected control conductor shall not be of a color reserved for the grounded branch circuit conductor or the equipment grounding conductor.*" And NEC 200.6(A)(2), "*An insulated grounded conductor of 6 AWG or smaller shall be identified by one of the following means: (2) The insulated conductor shall have a continuous gray outer finish.*" For this reason, Topaz® will be transitioning from using Purple and Gray dimming wires, to Purple and Pink dimming wires.

Item:
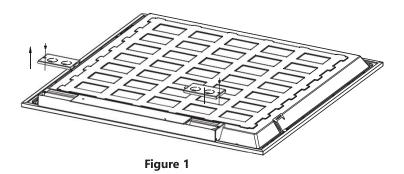**PL14-40WPCTS-D   PL22-35WPCTS-D-EM**
PL22-35WPCTS-D   PL24-40WPCTS-D-EM
PL24-40WPCTS-D   PL24-50WPCTS-D-EM
PL24-50WPCTS-D

TOPAZ ®
A Southwire Company

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

Model	Input Voltage	Frequency	Wattage	Rated Current 120V	Rated Current 277V
PL14-40WPCTS-D	120-277V	60Hz	20W	0.22A	0.08A
			30W	0.33A	0.12A
			40W	0.44A	0.17A
PL22-35WPCTS-D PL22-35WPCTS-D-EM	120-277V	60Hz	25W	0.28A	0.10A
			30W	0.33A	0.12A
			35W	0.39A	0.14A
PL24-40WPCTS-D PL24-40WPCTS-D-EM	120-277V	60Hz	30W	0.33A	0.12A
			35W	0.39A	0.14A
			40W	0.44A	0.159A
PL24-50WPCTS-D PL24-50WPCTS-EM	120-277V	60Hz	30W	0.33A	0.12A
			40W	0.44A	0.159A
			50W	0.55A	0.20A

T-Grid Installation:

Figure 1

1. At the main fuse/breaker, turn off the power.
2. Remove panel from packaging carefully.
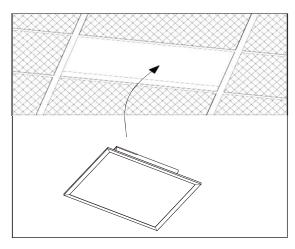3. Unscrew driver cover and remove knockouts to wire power supply. **(Figure 1)**

TOPAZ ®
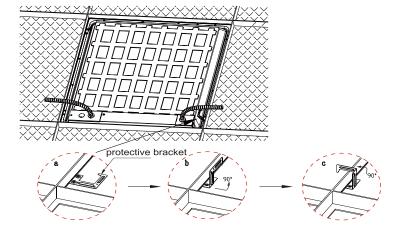A Southwire Company

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

Figure 2

4.   Fixture needs to pass through the grid at a 45- degree angle and the fixture needs to lay on the grid. **(Figure 2)**

Figure 3

5.   Grid clips are provided for additional retention to ceiling system. Orient the tabs on back of the fixture over the grid by bending tabs up 90 degrees perpendicular to back of the fixture. Next bend tabs 90 degrees towards T-GRID frame (Fig.3)
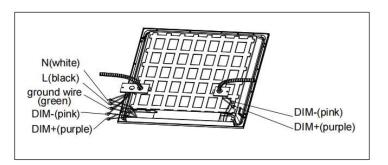

Figure 4

6.   Using the open knockout bring in the supply line. Using wire nuts, attach the ground wire to the ground supply wire, the black (line) wire to the black supply wire, and the white (neutral) wire to the white supply wire. **(Figure 4)**
7.   If using a dimmer, connect the Purple(Dim+) and Pink (Dim-) dimming leads to the 0-10V dimmer. See wiring diagram below.
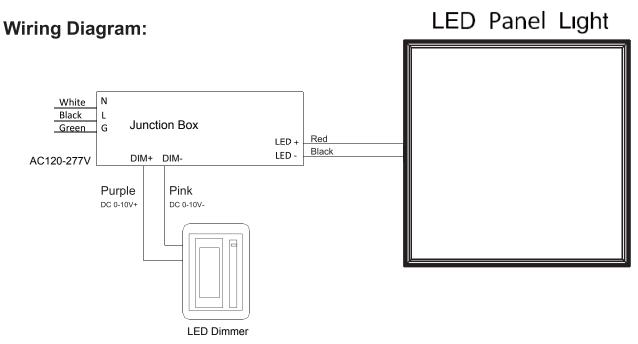
Item:
PL14-40WPCTS-D   PL22-35WPCTS-D-EM
PL22-35WPCTS-D   PL24-40WPCTS-D-EM
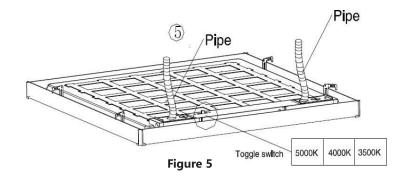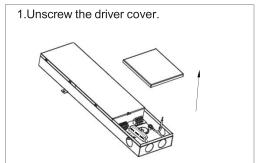**PL24-40WPCTS-D   PL24-50WPCTS-D-EM**
PL24-50WPCTS-D

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

Wiring Diagram:

LED Panel Light

White — N
Black — L
Green — G
Junction Box

AC120-277V

DIM+   DIM-

LED +   Red
LED -   Black

Purple   Pink
DC 0-10V+   DC 0-10V-

LED Dimmer

NOTE: This fixture is compatible with 0-10V dimming. If installing dimming wires, follow your dimmer instructions for wiring to the Purple (Dim +) and Pink (Dim -) leads.

Power and CCT Selection:

⑤ Pipe   Pipe   Pipe

Toggle switch   5000K 4000K 3500K

Figure 5

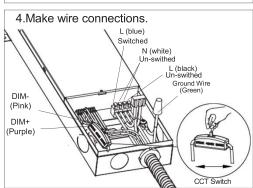8.   Adjust toggle switch to desired color temperature and wattage at the back side of the panel. **(Figure 5)**

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

Emergency Driver Installation:

1.Unscrew the driver cover.

2.Connect the conduit to the driver box.

Conduit

3.Wiring diagram.

4.Make wire connections.

L (blue) Switched
N (white) Un-swithed
L (black) Un-swithed
Ground Wire (Green)
DIM- (Pink)
DIM+ (Purple)
CCT Switch

5.Put on the driver cover and secure with screw.

Push to Test/ Charge Indicator

Charge Indicator: The indicator light shows the status of the Emergency Driver.
Steady Red: Charging.
Steady Green: Charged.

Push to Test:
Momentary Test: To test the Emergency Driver, press and release the button (shown in the figure on the left). Once pressed the fixture will switch to emergency mode. Once the test button is released the fixture should return to normal operation.

90 Minute Test: To test the 90 minute discharge, press and hold the button (shown in figure on left) for 5 seconds. The fixture should enter emergency mode for 90 minutes then return to normal operation. To exit at any time press and hold the test button for 5 seconds.

NOTE: To ensure the Emergency Driver is working properly, it is advised to test the fixture every 3-6 months.

Item:
PL14-40WPCTS-D   PL22-35WPCTS-D-EM
PL22-35WPCTS-D   PL24-40WPCTS-D-EM
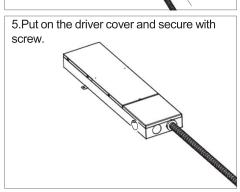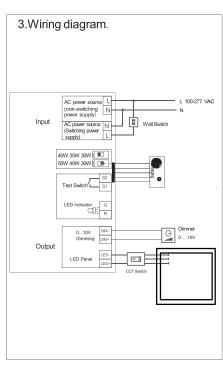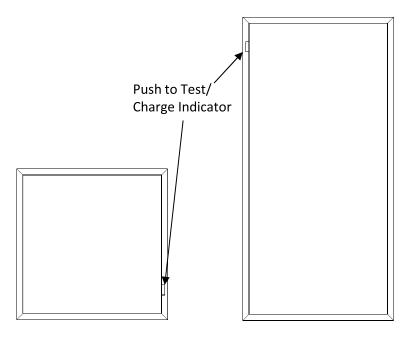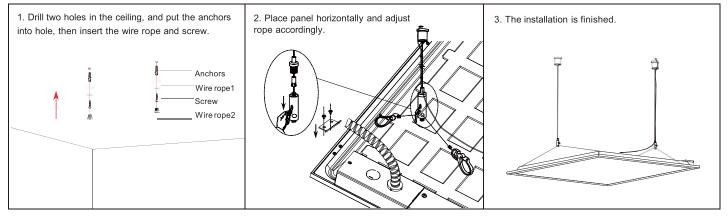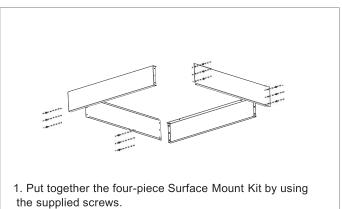**PL24-40WPCTS-D   PL24-50WPCTS-D-EM**
PL24-50WPCTS-D
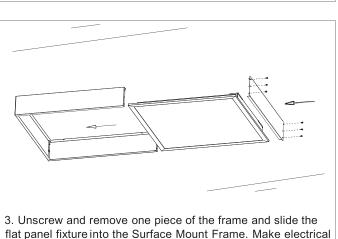
LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

Suspension Kit Installation (cable assembly must be purchased separately)

1. Drill two holes in the ceiling, and put the anchors into hole, then insert the wire rope and screw.

Anchors
Wire rope1
Screw
Wire rope2

2. Place panel horizontally and adjust rope accordingly.
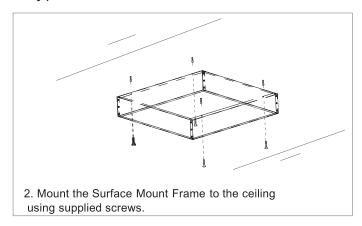
3. The installation is finished.

Note: 2*2ft & 2*4ft and 2*2ft emergency fixtures: 2 pcs suspension kits needed for installation. 2*4 emergency Fixtures: 3pcs suspension kits needed for installation.
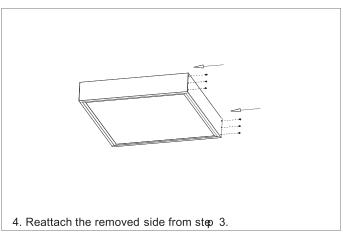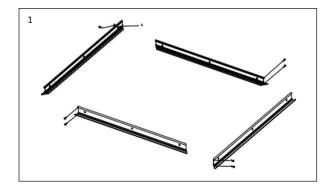
Ceiling Mounting (mounting kit sold separately)

1. Put together the four-piece Surface Mount Kit by using the supplied screws.

2. Mount the Surface Mount Frame to the ceiling using supplied screws.

3. Unscrew and remove one piece of the frame and slide the flat panel fixture into the Surface Mount Frame. Make electrical connection from the incoming power to the LED fixture driver.

4. Reattach the removed side from step 3.
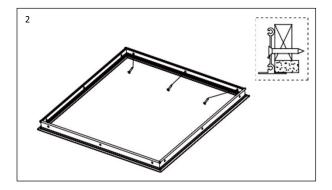
TOPAZ®
A Southwire Company

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

Drywall flange kit installation (drywall flange kit sold separately)

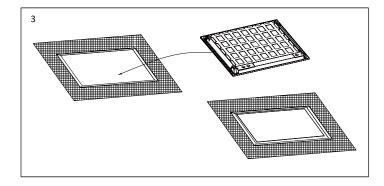| Size	Cut-Out Size(inch)
1'X4' fixture	12-5/8" x 48-5/8"
2'X2' fixture	24-5/8'' x 24-5/8''
2'X4' fixture	24-5/8'' x 48-5/8''

1. Remove accessories from the package carefully. Put together the four-piece drywall flange kits by using the supplied Wafer Head Self Tapping Screws . **(Figure 1)**

2. Place the installed drywall flange kit into the corresponding hole and secure it to the hole with the countersunk head self tapping screws. **(Figure 2)**
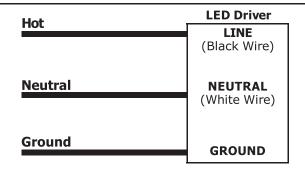
3. Place the panel into the flange kit and connect the input lines. Installation complete. **(Figure 3)**

Item:
PL14-40WPCTS-D   PL22-35WPCTS-D-EM
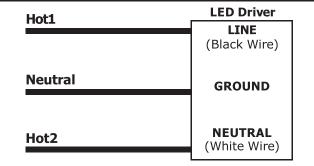**PL22-35WPCTS-D   PL24-40WPCTS-D-EM**
PL24-40WPCTS-D   PL24-50WPCTS-D-EM
PL24-50WPCTS-D

TOPAZ®
A Southwire Company

LED FLAT PANEL PCTS
INSTALLATION INSTRUCTIONS

LED Driver

Hot

LINE
(Black Wire)

Neutral

NEUTRAL
(White Wire)

Ground

GROUND

120 VOLTS **&** **277 VOLTS**

LED Driver

Hot1

LINE
(Black Wire)

Neutral

GROUND

Hot2

NEUTRAL
(White Wire)

208 VOLTS **&** **240 VOLTS**

Split Phase Wiring (USA 3 Wire)

**NOTE: THESE INSTRUCTIONS DO NOT ADDRESS ALL PERMUTATIONS THAT MAY EXIST IN INSTALLATION, MAINTENANCE, AND OPERATING ENVIRONMENT.