



Southwire™



TOOLS & EQUIPMENT

SIMPULL™ FISH TAPE LEADER REPLACEMENT INSTRUCTIONS: FOR BOTH THE FLEXIBLE METAL LEADERS AND THE NON-CONDUCTIVE GLOW-IN-THE-DARK LEADERS.

STEP 1: Make a flush cut of fish tape material using a side-cutting plier.



STEP 2: Insert material into sharpener and sharpen material until a fine tip point is created.

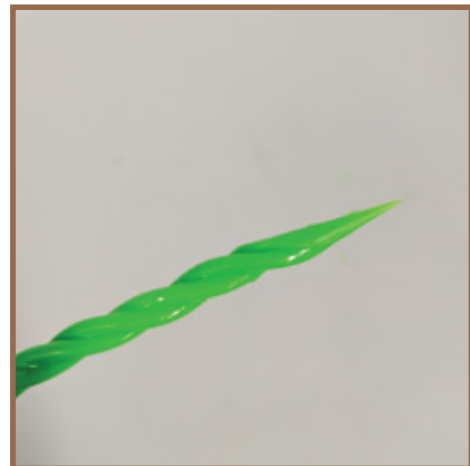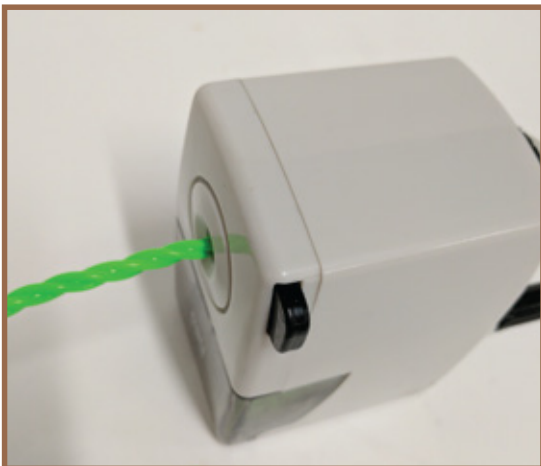




Southwire™

TOOLS & EQUIPMENT

STEP 3: Screw die onto material and screw clockwise until roughly .75" of the material is threaded, then remove the die from the material.

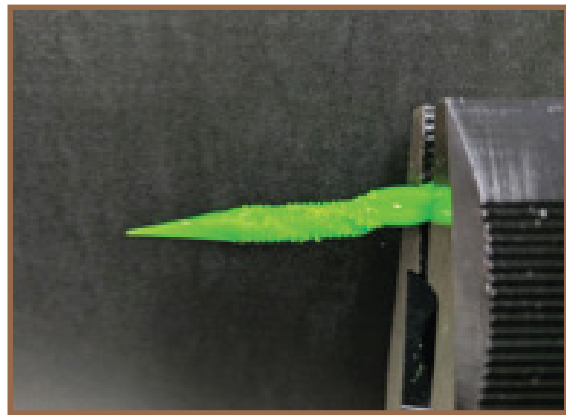

STEP 4: Using gloves, apply glue to the inside of replacement leader and quickly screw the replacement leader onto the fish tape material until the leader cannot be threaded on any further (This applies for the flexible metal leaders and the non-conductive leaders). After the leader is securely fastened, add one drop of glue to the base of the connection. Let leader set for 15 mins prior to usage.

