



Southwire®

GUIDE FOR
INSTALLATION & USE OF
**ACSR & ACSR/TW
CONDUCTOR**



SOUTHWIRE.COM

OUR STORY

As a family business, Southwire proudly continues building on our commitment to environmental stewardship and corporate sustainability by prioritizing stakeholder expectations, and supporting the wellbeing of our communities and the environment in which we live. To help us meet this commitment, we organize our sustainability strategy around five core tenets: Growing Green, Living Well, Giving Back, Doing Right, and Building Worth.

We Deliver Power...Responsibly®

We remain committed to the sustainability of our company for the next 100 years and beyond. As we strengthen this commitment, we continue to work hard every day to discover, develop, and distribute sustainable solutions that exceed the expectations of our stakeholders around the world.

OUR MISSION

To be a **preferred provider** of solutions to the electrical industry by providing innovative products and services with exceptional quality.

OUR VALUES

Our **ONE Southwire** culture prioritizes the interests of our team members, customers, and communities through a continuous commitment to empowerment, trust, consistency, and inclusion.

OUR REACH

Nearly one in two new homes built in the United States contains our wire, and we produce half of the cable used to transmit and distribute electricity throughout the nation.

OUR PRODUCTS

Our product teams and dedicated resources work together to listen to and work with our customers, creating solutions that deliver unparalleled value through product innovation, safety, and efficiency.

OUR SERVICE

Service is more than a word or a phone number; it's a tangible support system that assists you through the entire project cycle; from our knowledgeable customer service team, to our experienced field sales team, we're there every step of the way.

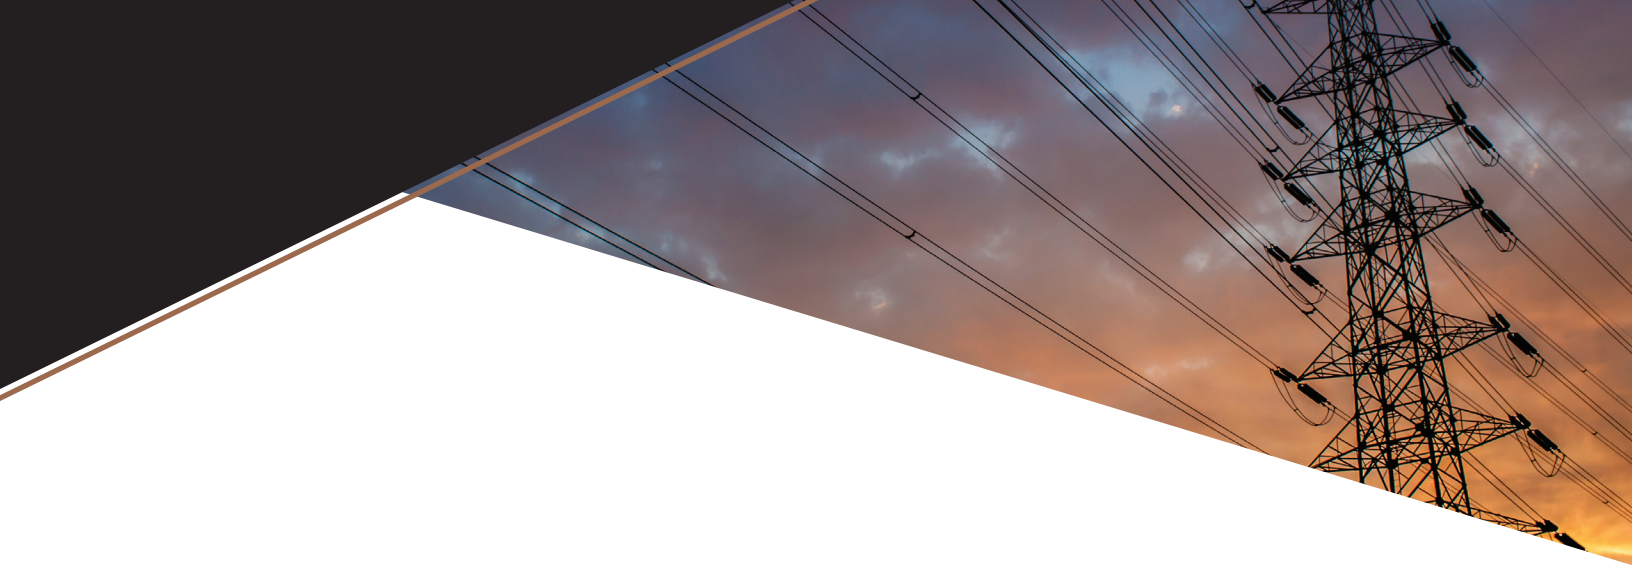


TABLE OF CONTENTS

GUIDE FOR INSTALLATION AND USE OF **ACSR & ACSR/TW CONDUCTOR**

Introduction	4	Conductor Grips	11
Reel Handling and Storage	5	Sagging Methods.....	13
Conductor Oxidation	6	Vibration Dampers	13
Conductor Staining	6	Conductor Repair	14
Conductor Handling	7	Miscellaneous.....	14
Spooling and Training	7	Hardware Manufacturer Links	15
Installation	7		
Payoff.....	7		
Bullwheel.....	8		
Stringing Sheaves.....	9		
Running Grounds	10		
Conductor Stringing and Sagging.....	10		

INTRODUCTION

Southwire's Aluminum Conductor, Steel Reinforced (ACSR) and Trapezoidal-Shaped Wire Aluminum Conductor, Steel Reinforced (ACSR/TW) are aluminum conductors with a stranded steel core. ACSR conductors have round wire aluminum strands, while ACSR/TW conductors have trapezoidal-shaped aluminum strands for increased ampacity for the same diameter, or reduced diameter for the same conductor size.

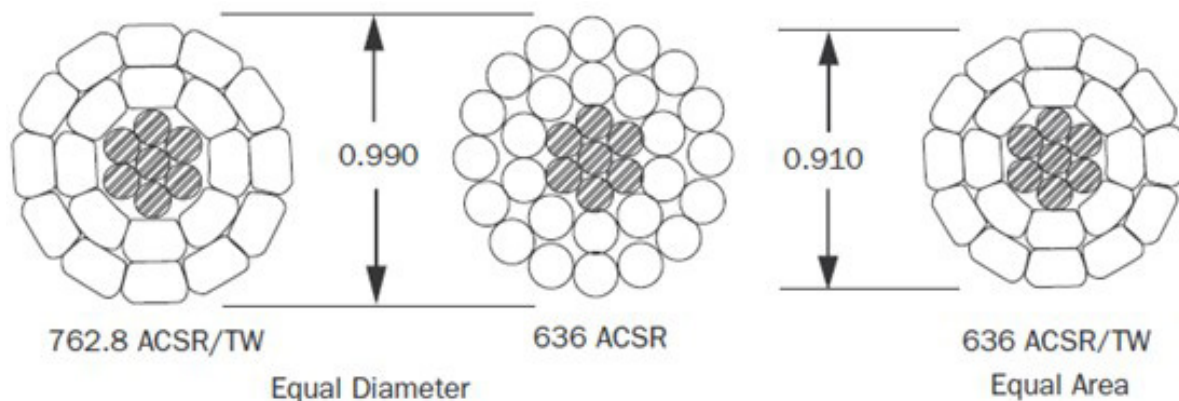


Figure 1: Comparison of ACSR and ACSR/TW conductors.

Southwire recommends that ACSR conductor installations be performed in accordance with IEEE 524 "Guide to the Installation of Overhead Transmission Line Conductors". This guide is intended to summarize best practices for installing ACSR and ACSR/TW conductors.

REEL HANDLING AND STORAGE

Reels should be stored away from physical and environmental hazards, such as chemicals. Conductor reels must be stored standing on their flanges in a flat, well-drained area. The conductor must not be allowed to touch the ground.

Special care should be taken to ensure that ACSR conductor and reels are not damaged. Unloading equipment must never come in contact with the conductor. Lifting must be performed using a fork lift or crane as described below.

When using a fork lift, the forks shall be placed under both flanges, with the flange facing the operator.

When using a crane, a spreader bar must be used in conjunction with either “J” hooks or an axle to prevent damage to the reel flange and conductor. “J” hooks should be placed in the arbor holes. Axles should be inserted through the arbor holes and lifted with straps.

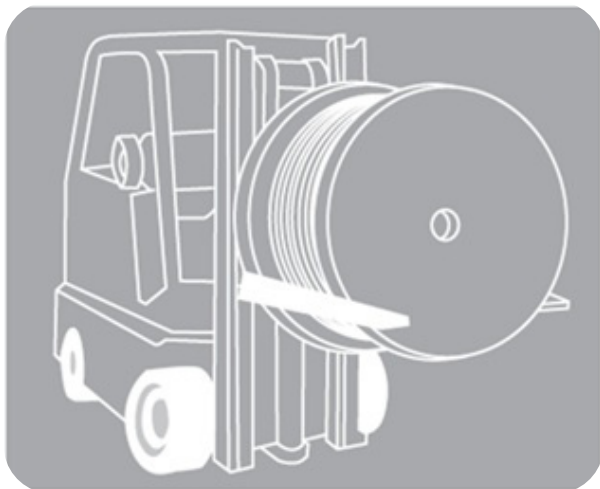


Figure 2: Forklift handling of reels.



Figure 3: Crane handling of reels.

CONDUCTOR OXIDATION

Exposure of conductor to air can cause oxidation to form on the conductor.

Oxidation results from a chemical reaction between oxygen and aluminum, yielding an oxide layer on the conductor. While it is normal for oxidation to form, necessary steps should be taken to clean the conductor of oxidation at hardware application areas. The conductor must be brushed in these areas prior to installing hardware to ensure adequate metal-to-metal contact.



Figure 4: Oxidation on a conductor.

CONDUCTOR STAINING

When conductor reels are stored outdoors, moisture can accumulate on the conductor on the underside of the reel. If the moisture contains chemicals from the surrounding atmosphere, a black stain can appear on the conductor. This has been found to be more prevalent in non-specular conductor because the drawing oils have been removed. Figure 5 shows the appearance of a water stain.

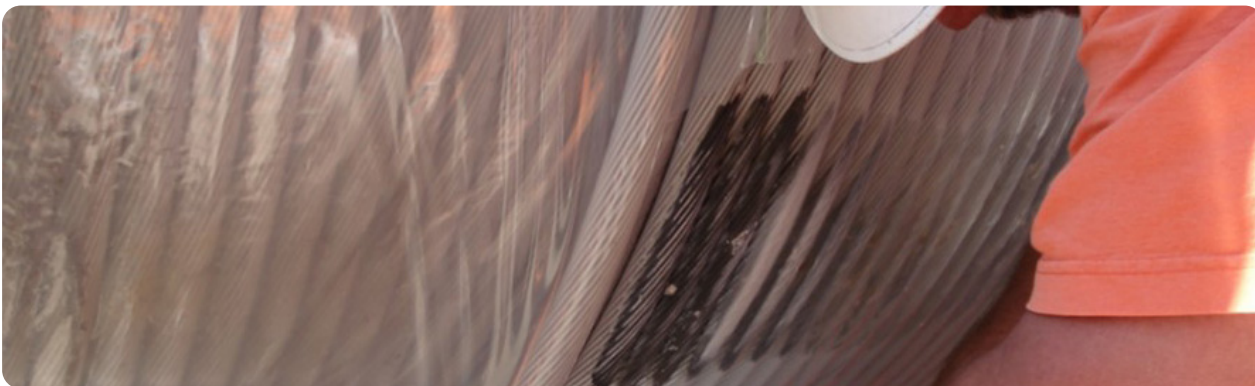


Figure 5: Water stain on conductor.

Water stains are a cosmetic issue; they have no adverse effect on the performance or service life of the conductor. In most environments, the conductor will darken in the first few months after the line is energized, and the stain will no longer be noticeable. Aluminum Association Technical Bulletin TR3, “Guidelines for Minimizing Water Staining of Aluminum” discusses this issue in detail and contains advice for avoiding water staining.

CONDUCTOR HANDLING

If conductor must contact the ground due to unavoidable circumstances, a smooth, rigid material may be laid in its path to prevent damage. Minor abrasions should not be a cause of concern; most can be sanded or buffed out. In an EHV application, the abrasion should be evaluated for possible corona concerns.

SPOOLING AND TRAINING

The minimum diameter for spooling of ACSR is 30 times the conductor diameter. The minimum bending radius, or training radius, before permanent deformation occurs is 12 times the conductor diameter.

INSTALLATION

PAYOFF

The conductor reel should be set up on a reel payoff stationed 40-50 feet (12-15 meters) behind and in line with the bullwheel tensioner. This will ensure that the conductor does not scrub the flanges as it is being unwound¹.



Figure 6: Payoff and bullwheel setup.

Proper adjustment of the fairlead roller guides is necessary to prevent scuffing of the conductor as it reeves through the bullwheel. Only enough braking tension should be applied to the reel to prevent the reel from over-rotating (free-spooling) when the pulling operation stops. A slight droop between the payoff and bullwheel is desirable, as this indicates low tension between the bullwheel and payoff. Back tension should be kept at a minimum. This is especially important for smaller conductor diameters and wooden reels². If too much back tension is applied, the conductor on the outer layer can “pull down” into the underlying layers, as in Figure 7.



Figure 7: Conductor pulldown.

¹IEEE Standard 524-2016 pg. 62

BULLWHEEL

Only dual drum multi-groove bullwheel tensioners are recommended for multilayered ACSR³. The bullwheel drums may be tilted or offset so that the offset will be approximately one-half the groove spacing⁴.

Semicircular grooves with depths of 0.5 or more times the conductor diameter and flare angles of 5-15° from vertical generally are recommended. For multilayer conductors, the number of grooves in the bullwheel must be sufficient to prevent the outer layer of wires from slipping through underlying layers. The minimum bottom groove diameter of the bullwheel should be 39 times the conductor diameter minus 4 inches (10 centimeters). Additional sizing charts and diagrams can be found in IEEE Standard 524⁵. Bullwheels must be properly sized and lined to prevent scuffing and damaging of the conductor.



Figure 8: Dual drum bullwheel, courtesy of Oncor.

The conductor should be reeved through the bullwheels such that, when facing in the direction of pull, the conductor will enter the bullwheel on the left side and exit from the right. This orientation is necessary to avoid any tendency to loosen the outer layer of strands⁵.

If lined, durable polymer-lined grooves are recommended to avoid permanent scuffing of the surface of the conductor. Semiconducting linings should not be relied on for grounding purposes⁵.

It is important never to break the conductor over a small roller under high tension, as this can permanently damage the conductor. Figure 9 shows an example of the conductor traveling over a small roller (not recommended); Figure 10 shows a suitable roller diversion technique.



Figure 9: Adverse interaction of conductor with roller, courtesy of Transpower New Zealand.



Figure 10: Suitable technique for roller diversion, courtesy of Transpower New Zealand.

²IEEE Standard 524-2016 pg. 69,

³IEEE Standard 524-2016 pg. 52,

⁴IEEE Standard 524-2016 pg. 82

⁵IEEE Standard 524-2016 pg. 52-53

BULLWHEEL CONT.

The bullwheel should be set up in line with the pull and 3-4 times as far from the base of the structure as the distance from the base of the structure to the height of the entrance block at the first structure⁶. This is important to ensure the conductor is not pulled over the entrance block at a large angle.

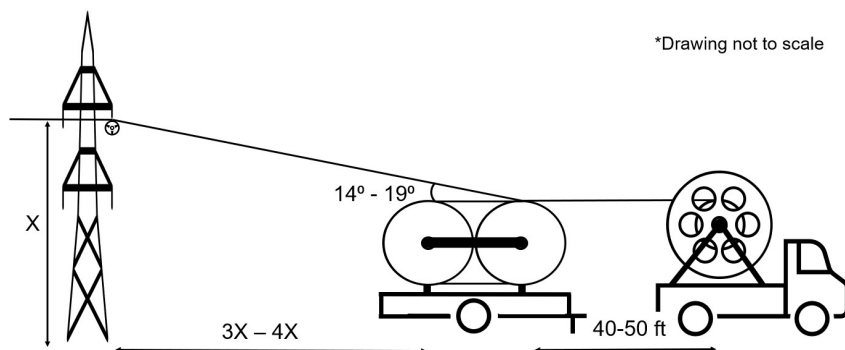


Figure 11: Orientation for bullwheel/payoff setup.

STRINGING SHEAVES⁷

Sizing recommendations for sheaves should be made by the sheave manufacturer, but typical sizing criteria are discussed below.

A minimum bottom groove diameter of 20 times the conductor diameter minus 8 inches (20 centimeters) is generally used for typical pulls [i.e. pulls less than 2 miles (3 kilometers) with level spans and minimal angles]. For pulls over 2 miles (3 kilometers) or with substantially uneven terrain, the bottom groove diameter should be increased by 4 inches (10 centimeters). **BOTTOM GROOVE DIAMETER SHOULD NEVER BE LESS THAN 12 TIMES THE CONDUCTOR DIAMETER.** Entrance sheaves are typically sized at 20 times the conductor diameter. Higher tension pulls or structures with a turning angle greater than 20° may also warrant larger sheaves. For angles between 20-45°, a bottom groove diameter of 25 times the conductor diameter is typically recommended. For angles up to 90°, two sheaves with bottom groove diameters of 25 times the conductor diameter are typically recommended. Sheaves on structures with a turning angle should be supported so that the conductor acts through the center line of the sheave. Measurement A in Figure 12 below shows where to measure the bottom groove diameter.

The minimum radius at the base of the groove is recommended to be 1.1 times the radius of the conductor. The location of this measurement is shown as Measurement B. Sheaves with a groove radius as above may, in general, be used with smaller conductors. However, the more layers of aluminum that exist, the more important it is to have a well-fitting groove.

The minimum depth of the groove should be 1.25 times the conductor diameter. This measurement is given as Measurement C. The flare of the grooves should be between 12-20° from vertical to facilitate the passage of swivels, grips, etc., and to contain the conductor for angled pulls.

⁷IEEE Standard 524-2016 pg. 55-57

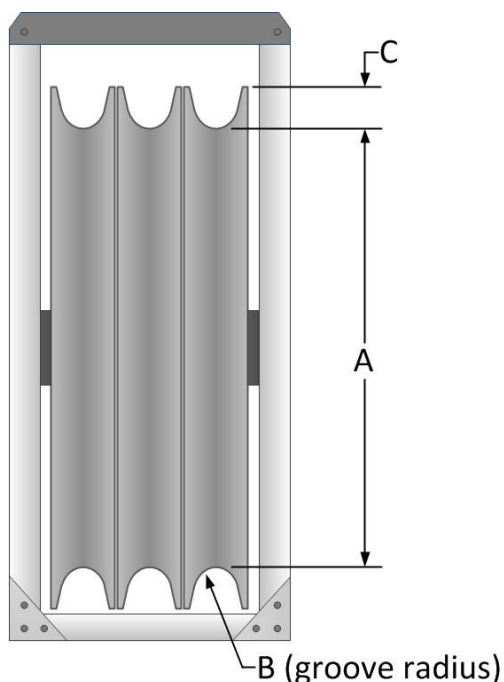


Figure 12: Measurements for stringing sheave.

If lined, sheaves should be lined with a durable polymer to protect against scratching of the conductor. Sheave bearings must be in good working condition and free-wheeling. Make sure all sheaves are in proper working order before use.



Figure 13: Stringing sheave.

RUNNING GROUNDS⁸

Running grounds should be installed along two points in the pull—one between the reel stand or tensioner and first structure, and the other between the puller and last structure. Running grounds should be bonded to the established ground and free-wheeling. They should not be over tightened, as this could cause surface abrasion or birdcaging.

CONDUCTOR STRINGING AND SAGGING

To avoid damaging the conductor, tension stringing is recommended. The maximum recommended pulling tension during the stringing operation should not exceed that necessary to maintain clearances above obstructions on the ground or safety structures. Recommended stringing tensions are between 5-10% of the rated breaking strength (RBS) of the conductor and should not exceed 50% of sagging tensions. In circumstances where the tension must exceed 50% of sagging tensions, contact Southwire for a recommendation on creep correction. Typical pulling speeds are between 3-5 miles per hour (5-8 kilometers per hour)⁹.

Southwire recommends that any conductor be pulled up to sag and clipped in as soon as possible. The conductor should not be left in the sheaves for more than 24 hours before being pulled up to sag. If tension must be reduced after sagging (due to vibration concerns, equipment availability, etc.), the attachment points should be marked immediately after sagging. The conductor should be clipped in within 72 hours of stringing¹⁰. If a conductor must be left in the sheaves for an extended period of time, it should be left at a tension less than 50% of sagging tension (close to pulling tension). If this tension is exceeded, contact Southwire for a recommendation on creep correction.

CONDUCTOR GRIPS

Southwire does not recommend nor take responsibility for the user of any conductor grips. All grips must first be approved by the grip manufacturer for use with ACSR.

All grips used for ACSR must be of the transmission grade. The jaws of transmission grade grips are longer to ensure more gripping area on the conductor. Grip jaws may be round or oval but not V-shaped. Grips must be properly sized for the conductor type, conductor diameter, and tensions to be installed. Ranging grips that accept a range of conductor sizes, e.g. 1/0-4/0 AWG, should not be used. Certain high-tension applications require the use of tandem grips. If the required tension exceeds the safe load of a single grip, two grips must be used in tandem.

Prior to use, grips must be inspected to ensure they are in good operating condition and tested for holding strength on the conductor to be installed. Southwire recommends taking a section of the conductor to be installed and, using two line trucks as temporary anchors, testing the holding strength of the grips using a chain hoist and dynamometer to verify grip holding strength. During testing, grips should not slip when subjected to a minimum tension of 110% of the working tension during installation. The following grips may be used for ACSR conductor:

For Pulling:

Basket-style:

A basket grip must only be used for pulling ACSS conductor. Basket grips must be double-banded on the ends to prevent slipping.

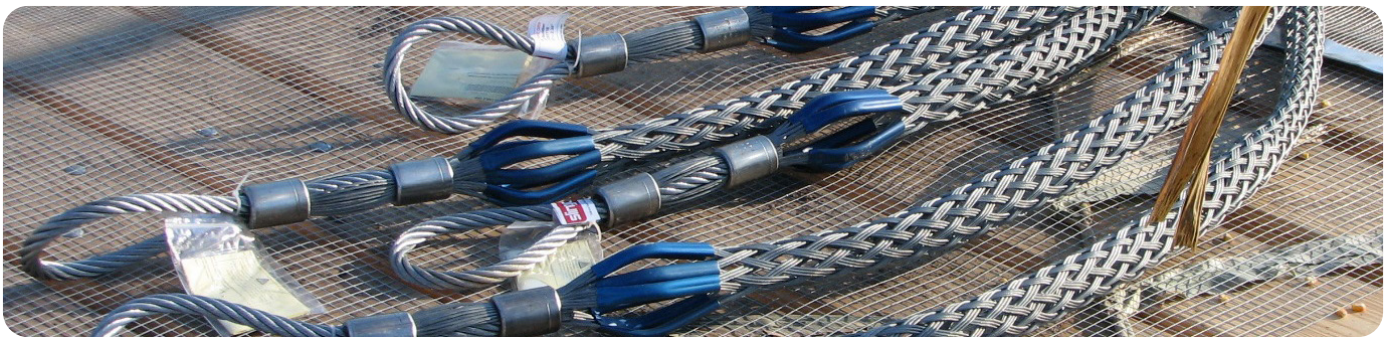


Figure 14: Basket grips.

A swivel is required between the Basket grip and pull line or between grips if multiple reels are tied together (double-socked) for longer pulls. The swivel will allow the conductor to rotate freely during the pulling process.



Figure 15: Swivel.

⁹IEEE Standard 524-2016 pg. 66,

⁹IEEE Standard 524-2016 pg. 68,

¹⁰IEEE Standard 524-2016 pg. 78

For Sagging:

Pocketbook-style:

These grips have also been used with ACSS. Bolts on pocketbook-style grips, or come alongs, must be cleaned and well lubricated. Pull tests for grips must be conducted per the manufacturer requirements. The bolts must be snugged-up and then tightened with at least five passes applying full torque recommended by the manufacturer.



Figure 16: Pocketbook-style grips.

Klein “Chicago-style”:

Chicago grips are the most commonly used sagging grip. For conductor diameters 0.953” and smaller, Klein grips should be of catalog number 1656-XX and used in tandem. For conductor diameters larger than 0.953”, grips should be catalog number 1628-50. Grips should be closely sized for the conductor diameter to minimize strand distortion. For applications where the load is expected to exceed 10,000 lb or 40% RBS, use two grips in tandem.



Figure 17: Klein “Chicago-style” grip.

Other grips may be determined to be applicable for use with ACSS. Any grips should be qualified by the manufacturer for use with ACSS and should be tested prior to use.

Some manufacturers publish their grip ratings based on use with ACSR conductors and then derate them for use with ACSS conductors. The lower rating is necessary because the grips must hold onto the fully annealed aluminum in ACSS as opposed to the hardened aluminum in ACSR. Check with the grip manufacturer for a recommendation before using any grip with ACSS conductors.

SAGGING METHODS¹¹

Conductor sagging involves the use of stringing tables to determine the required sag or tension at a specific conductor temperature. Conductor temperature should be measured at the time of sagging using a conductor thermometer placed at or near the conductor. The conductor thermometer should be installed prior to sagging to allow for temperature stabilization. Conductor is often tensioned to the correct sag/tension using one of the following three methods: (1) stopwatch method, (2) transit method, or (3) dynamometer method.

METHODS:

Stopwatch Method:

The stopwatch method involves jerking a rope connected to the conductor and measuring the time it connected to the conductor and measuring the time it times. Three or five return waves usually provide an accurate measurement of sag. The governing equation for the stopwatch method can be seen below.

$$D = 48.3 \left(\frac{t}{2n} \right)^2$$

D = conductor sag, in
 t = time, sec.
 n = number of return waves

Transit Method:

The transit method includes three types of sagging methods: calculated angle of sight, calculated target and horizontal line of sight. Choice of the best transit sagging method to use is determined by the terrain of the span in the right-of-way and span length. Tall structures on flat terrain and short spans indicate the calculated target or horizontal line of sight method would be most applicable. Steep slopes, long spans, and large sags indicate the calculated angle of sight method would be best.

Dynamometer Method:

In the dynamometer method, a dynamometer is inserted in-line with the sagging equipment to get a direct measurement of line tension. To ensure accurate sagging, there should be minimal sheaves in the line section. This method works best on smaller conductors, shorter spans, and ruling spans containing one or two spans.

VIBRATION DAMPERS

Recommendations on type and placement of dampers on ACSR lines should be made by the damper manufacturer.



Figure 18: Stockbridge damper, courtesy of AFL Global.

¹¹IEEE Standard 524-2016 pg. 73-74

CONDUCTOR REPAIR

Repair methods may include use of armor rods or a repair sleeve to reestablish the full current carrying capacity. Please consult the hardware manufacturer for their recommendation on use of armor rods or a repair sleeve.

Disclaimer: All conductor hardware must be approved by the hardware manufacturer for use with ACSR prior to installation. Please consult the hardware manufacturer for more information on proper application.

MISCELLANEOUS

Neither Southwire nor anyone else who has been involved in the creation, production, or delivery of this publication shall be liable for any direct, indirect, consequential, or incidental damages arising out of the use, the results of the use, or inability to use such publication, even if Southwire has been advised of the possibility of such damages or claim. Some states do not allow the exclusion or limitation for consequential incidental damages, so the above limitation may not apply to you.

HARDWARE MANUFACTURER LINKS

For more information on conductor hardware, including splices, dead-ends, grips, armor rod, repair sleeves, dampers, and suspension shoes, please see the hardware manufacturer websites below.

HARDWARE MANUFACTURER LINKS

AFL:

<http://www.aflglobal.com/Home.aspx>

Preformed Line Products (PLP):

<http://www.preformed.com/>

Hubbell:

<http://www.hubbell-wiring.com/productinformation/viewcatalog.aspx?Dest=hubbell-wiring.com/press/catalog/t.pdf>

<http://www.hubbellpowersystems.com/connectors/trans/>

Burndy:

<http://www.burndy.com/>

MacLean:

<http://www.maclepower.com/>

REFERENCES

IEEE Standard 524-2002, "Guide to the Installation of Overhead Transmission Line Conductors."

OHCM Overhead Conductor Manual 3rd Edition. Springer, Paul. Holcombe, Charles. Pearson, Drew. and Armstrong, Allee. Southwire. 2018. Print

DISCLAIMER

This publication is a collection of items of general information related to the subject of ACSR or ACSR/TW conductor. It is not intended to be nor should it be used as authority for design, construction, use, or installation. The design, construction, use, and installation of ACSR or ACSR/TW conductor should only be undertaken by competent professionals in light of currently accepted design and engineering practices. While great care has been employed to ensure that the applications, tables, standards, references, and other information contained herein are free of errors, absolutely no warranties, either expressed or implied, are made as to the accuracy or completeness of any such material contained herein.

THOSE PREPARING AND/OR CONTRIBUTING TO THE PUBLICATION SPECIFICALLY DISCLAIM ANY WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED. THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY SPECIFICALLY DISCLAIMED BY SOUTHWIRE AND ALL OTHER PARTIES INVOLVED IN THE CREATION, PRODUCTION, OR DELIVERY OF THIS PUBLICATION.

Neither Southwire nor anyone else who has been involved in the creation, production, or delivery of this publication shall be liable for any direct, indirect, consequential, or incidental damages arising out of the use, the results of the use, or inability to use such publication, even if Southwire has been advised of the possibility of such damages or claim. Some states do not allow the exclusion or limitation for consequential incidental damages, so the above limitation may not apply to you.



Southwire®

GUIDE FOR
INSTALLATION & USE OF
**ACSR & ACSR/TW
CONDUCTOR**

get social with us:



/SOUTHWIRE



/SOUTHWIRE-COMPANY



@SOUTHWIRE



@SOUTHWIRE



SCAN TO LEARN MORE

WWW.SOUTHWIRE.COM

All Trademarks or Registered Trademarks (TM/®) are owned or licensed by Southwire Company.
Any other TM/®- Trademark or Registered Trademark of Southwire Company.